



K&M 0904

STANDS & ACCESSOIRES

Type	Microphone stands	excl VAT	incl VAT	
19900-300-55	KM19900B	MICROPHONE STAND	39,28	47,53
20000-300-55	KM20000B	MICROPHONE STAND	60,22	72,87
20120-300-01	KM20120C	MICROPHONE STAND	37,44	45,30
20120-300-55	KM20120B	MICROPHONE STAND	33,43	40,45
20130-300-01	KM20130C	MICROPHONE STAND	38,44	46,51
20130-300-55	KM20130B	MICROPHONE STAND	34,71	42,00
20800-309-55	New KM20800B	MICROPHONE STAND - improved model	81,57	98,70
20811-400-55	KM20811B	MICROPHONE STAND	196,73	238,04
21411-400-55	KM21411B	MICROPHONE STAND	95,44	115,48
25680-300-55	KM25680B	ONE HAND MICROPHONE STAND	53,99	65,33
26000-300-01	KM26000C	MICROPHONE STAND	42,62	51,57
26000-300-55	KM26000B	MICROPHONE STAND	38,36	46,42
26010-300-01	KM26010C	MICROPHONE STAND	31,92	38,62
26010-300-55	KM26010B	MICROPHONE STAND	27,64	33,44
26010-300-87	KM26010G	MICROPHONE STAND »SOFT-TOUCH«	42,18	51,03
26025-300-56	KM26025SB	MICROPHONE STAND	45,80	55,42
26045-300-55	KM26045B	STACKABLE MICROPHONE STAND	36,68	44,39
26075-300-55	KM26075B	STACKABLE ONE-HAND MICROPHONE STAND	52,68	63,74
26085-300-55	KM26085B	ONE HAND MICROPHONE STAND	51,98	62,90
26150-300-02	KM26150C	MICROPHONE STAND	81,90	99,10
27800-300-55	KM27800B	Microphone stand limited edition	26,36	31,90

Type	Microphone stands with boom	excl VAT	incl VAT	
21020-300-01	KM21020C	MICROPHONE STAND	52,48	63,50
21020-300-55	KM21020B	MICROPHONE STAND	45,64	55,22
21021-300-55	KM21021B	OVERHEAD MICROPHONE STAND	74,55	90,21
21060-300-01	KM21060C	MICROPHONE STAND	44,96	54,40
21060-300-55	KM21060B	MICROPHONE STAND	39,86	48,23
21060-300-87	KM21060G	MICROPHONE STAND »SOFT-TOUCH«	47,64	57,64
21070-300-55	KM21070B	MICROPHONE STAND	38,11	46,11
21080-300-01	KM21080C	MICROPHONE STAND	49,48	59,87
21080-300-55	KM21080B	MICROPHONE STAND	43,07	52,11
21080-300-87	KM21080G	MICROPHONE STAND »SOFT-TOUCH«	51,98	62,90
21090-300-01	KM21090C	MICROPHONE STAND	50,36	60,94
21090-300-55	KM21090B	MICROPHONE STAND	49,72	60,16
21430-500-55	KM21430B	OVERHEAD MICROPHONE STAND	249,05	301,35
25200-300-55	KM25200B	MICROPHONE STAND	63,18	76,45
25500-300-55	KM25500B	MICROPHONE STAND	62,68	75,84
25600-300-55	KM25600B	MICROPHONE STAND	79,23	95,87
25900-300-01	KM25900C	MICROPHONE STAND	55,49	67,14
25900-300-55	KM25900B	MICROPHONE STAND	50,79	61,46
25900-370-87	KM25900G	MICROPHONE STAND »SOFT-TOUCH«	58,33	70,58
25910-300-55	KM25910B	MICROPHONE STAND	44,63	54,00
25910-300-87	KM25910G	MICROPHONE STAND »SOFT-TOUCH«	46,97	56,83
25950-300-55	KM25950B	MICROPHONE STAND »RIEN«	48,64	58,85
25960-300-55	KM25960B	MICROPHONE STAND	53,99	65,33
27105-300-01	KM27105C	MICROPHONE STAND	41,29	49,96
27105-300-55	KM27105B	MICROPHONE STAND	39,52	47,82
27195-300-55	KM27195B	MICROPHONE STAND	43,63	52,79

Type	Microphone boom	excl VAT	incl VAT	
18956-300-55	KM18956B	BOOM ARM	37,81	45,76
21100-300-01	KM21100C	BOOM ARM	18,55	22,45
21100-300-55	KM21100B	BOOM ARM	18,22	22,05
21110-300-01	KM21110C	BOOM ARM	21,23	25,69
21110-300-55	KM21110B	BOOM ARM	19,93	24,12
21140-300-55	KM21140B	BOOM ARM	18,39	22,25
21160-300-55	KM21160B	BOOM ARM	13,71	16,59
21231-400-55	KM21231B	BOOM ARM	96,80	117,13

Type Table & Various stands options

	Type		excl VAT	incl VAT
12140-000-55	KM12140B	UNIVERSAL TABLE-TOP STAND	47,67	57,68
12140-000-81	KM12140S	UNIVERSAL TABLE-TOP STAND	47,67	57,68
12400-000-01	KM12400C	TABLE MUSIC STAND	9,69	11,72
12440-000-00	KM12440	UNI-BOY »BOOK« STAND	101,81	123,19
12440-012-54	KM12440BL	UNI-BOY »BOOK« STAND	57,53	69,61
12440-012-59	KM12440R	UNI-BOY »BOOK« STAND	57,53	69,61
12440-012-60	KM12440GR	UNI-BOY »BOOK« STAND	57,53	69,61
12440-012-61	KM12440Y	UNI-BOY »BOOK« STAND	57,53	69,61
12450-000-00	KM12450	UNI-BOY »CLASSIC« STAND	101,81	123,19
12450-012-54	KM12450BL	UNI-BOY »CLASSIC« STAND	57,53	69,61
12450-012-59	KM1245R	UNI-BOY »CLASSIC« STAND	57,53	69,61
12450-012-60	KM12450GR	UNI-BOY »CLASSIC« STAND	57,53	69,61
12450-012-61	KM12450Y	UNI-BOY »CLASSIC« STAND	57,53	69,61
22110-300-55	KM22110B	TABLE FLANGE	16,21	19,61
22130-300-55	KM22130B	TABLE FLANGE	14,71	17,80
22140-300-55	KM22140B	TABLE FLANGE	6,35	7,68
23105-300-55	KM23105B	TABLE MICROPHONE STAND	9,03	10,93
23110-300-01	KM23110C	TABLE MICROPHONE STAND	6,69	8,09
23200-300-01	KM23200C	TABLE MICROPHONE STAND	22,90	27,71
23200-300-55	KM23200B	TABLE MICROPHONE STAND	22,56	27,30
23220-300-55	KM23220B	TABLE MICROPHONE STAND	20,73	25,08
23262-300-74	KM23262G	TABLE MICROPHONE STAND	20,73	25,08
23266-300-74	KM23266G	TABLE MICROPHONE STAND	20,73	25,08
23280-300-00	KM23280	TABLETOP MICROPHONE STAND	58,33	70,58
23300-300-01	KM23300C	TABLE/FLOOR MIC STAND	35,60	43,08
23300-300-55	KM23300B	TABLE/FLOOR MIC STAND	35,10	42,47
23400-300-55	KM23400B	TABLE/FLOOR MICROPHONE STAND	47,64	57,64
23700-300-01	KM23700C	TABLE CLAMP	8,56	10,36
23700-300-55	KM23700B	TABLE CLAMP	8,19	9,91
23855-000-55	KM23855B	TABLE FLANGE	14,37	17,39
25800-300-55	KM25800B	TABLE MICROPHONE CLAMP	40,12	48,55
29373-000-55	KM29373B	MICROPHONE TABLE BASE	107,48	130,05
29374-000-55	KM29374B	MICROPHONE TABLE BASE	107,48	130,05
29375-000-55	KM29375B	MICROPHONE TABLE BASE	107,48	130,05
29376-000-55	KM29376B	MICROPHONE TABLE BASE	70,54	85,35
29377-000-55	KM29377B	MICROPHONE TABLE BASE	107,48	130,05
29378-000-55	KM29378B	MICROPHONE TABLE BASE	70,54	85,35
29390-000-55	KM29390B	MICROPHONE TABLE BASE	82,25	99,53
29394-000-55	KM29394B	MICROPHONE TABLE BASE WITH SWITCH	84,41	102,14

Type Music stand

	Type		excl VAT	incl VAT
10010-000-54	KM10010BL	MUSIC STAND	24,24	29,33
10010-000-55	KM10010B	MUSIC STAND	24,24	29,33
10010-000-57	KM10010W	MUSIC STAND	24,24	29,33
10010-000-59	KM10010R	MUSIC STAND	24,24	29,33
10010-000-60	KM10010GR	MUSIC STAND	24,24	29,33
10010-000-61	KM10010Y	MUSIC STAND	24,24	29,33
10010-000-65	KM10010L	MUSIC STAND	24,24	29,33
10010-000-78	KM10010S	MUSIC STAND	24,24	29,33
10010-000-99	KM10010AC	MUSIC STAND	24,24	29,33
10041-000-55	KM10041B	MUSIC STAND »ROBBY«	34,43	41,66
10050-000-01	KM10050C	MUSIC STAND	29,73	35,98
10050-000-54	KM10050BL	MUSIC STAND	29,25	35,39
10050-000-55	KM10050B	MUSIC STAND	29,25	35,39
10050-000-59	KM10050R	MUSIC STAND	29,25	35,39
10050-000-78	KM10050S	MUSIC STAND	29,25	35,39
10050-000-99	KM10050AC	MUSIC STAND	29,25	35,39
10062-000-55	KM10062B	MUSIC STAND »ROBBY EXCLUSIV«	41,12	49,76
10065-000-01	KM10065C	MUSIC STAND	39,44	47,72
10065-000-55	KM10065B	MUSIC STAND	38,94	47,12
10065-000-78	KM10065S	MUSIC STAND	38,95	47,13
10068-000-55	KM10068B	MUSIC STAND	57,83	69,97
10100-000-01	KM10100C	MUSIC STAND	18,58	22,48
10100-000-55	KM10100B	MUSIC STAND	18,58	22,48
10200-000-01	KM10200C	MUSIC STAND	23,23	28,11
10300-000-01	KM10300C	MUSIC STAND	18,55	22,45
10700-000-01	KM10700C	MUSIC STAND	55,66	67,35
10700-000-55	KM10700B	MUSIC STAND	54,82	66,33
10810-000-55	KM10810B	MUSIC STAND	63,99	77,43
11100-000-54	KM11100BL	MUSIC STAND »BUTTERFLY«	50,42	61,01
11100-000-55	KM11100B	MUSIC STAND »BUTTERFLY«	50,42	61,01
11100-000-59	KM11100R	MUSIC STAND »BUTTERFLY«	50,42	61,01
11100-000-81	KM11100S	MUSIC STAND »BUTTERFLY«	50,42	61,01
11100-000-99	KM11100TC	MUSIC STAND »BUTTERFLY«	50,42	61,01
11479-000-55	KM11479B	SCHOOL ORCHESTRA MUSIC STAND	49,31	59,67
11611-000-00	KM11611	WOODEN MUSIC STAND	144,96	175,40
11616-000-00	KM11616	WOODEN MUSIC STAND	144,91	175,34
11617-000-00	KM11617	WOODEN MUSIC STAND	144,96	175,40
11636-000-00	KM11636	WOODEN MUSIC STAND »FRIDOLIN«	139,62	168,94
11646-000-00	KM11646	WOODEN MUSIC STAND »FRIEDA«	139,62	168,94

11701-000-00	KM11701	WOODEN MUSIC STAND	158,69	192,02
11706-000-00	KM11706	WOODEN MUSIC STAND	158,69	192,02
11707-000-00	KM11707	WOODEN MUSIC STAND	158,69	192,02
11811-050-01	KM11811C	ORCHESTRA MUSIC STAND	98,25	118,89
11812-000-01	KM11812C	ORCHESTRA MUSIC STAND	98,25	118,89
11812-000-55	KM11812B	ORCHESTRA MUSIC STAND	98,11	118,71
11818-000-01	KM11818C	ORCHESTRA MUSIC STAND	98,25	118,89
11818-000-55	KM11818B	ORCHESTRA MUSIC STAND	96,61	116,90
11819-500-01	KM11819C	ORCHESTRA MUSIC STAND	98,90	119,67
11831-000-01	KM11831C	ORCHESTRA MUSIC STAND	113,99	137,93
11832-000-01	KM11832C	ORCHESTRA MUSIC STAND	111,83	135,31
11841-000-01	KM11841C	ORCHESTRA MUSIC STAND	110,31	133,48
11842-000-01	KM11842C	ORCHESTRA MUSIC STAND	110,37	133,55
11852-000-55	KM11852B	ORCHESTRA MUSIC STAND	117,33	141,97
11865-000-55	KM11865B	ORCHESTRA MUSIC STAND »SYMPHONY«	55,49	67,14
11870-000-55	KM11870B	ORCHESTRA MUSIC STAND	58,82	71,17
11888-050-55	KM11888B	ORCHESTRA MUSIC STAND	86,74	104,96
11899-000-55	KM11899B	ORCHESTRA MUSIC STAND	60,50	73,21
11900-000-55	KM11900B	SOUND INSULATION STAND	127,66	154,47
11950-000-55	KM11950B	ONE-HAND ORCHESTRA MUSIC STAND	88,88	107,54
11980-000-55	KM11980B	ONE-HAND ORCHESTRA MUSIC STAND	88,88	107,54
12120-000-55	KM12120B	ORCHESTRA MUSIC STAND	47,80	57,84
12125-000-55	KM12125B	ORCHESTRA MUSIC STAND	53,97	65,31
12178-000-55	KM12178B	MUSIC STAND	50,81	61,48
12179-000-55	KM12178B	MUSIC STAND	48,14	58,25
12322-000-55	KM12322B	ORCHESTRA CONDUCTOR STAND	274,40	332,02
12342-000-55	KM12342B	ORCHESTRA CONDUCTOR STAND	255,00	308,56
13330-000-01	KM13330C	BASS DRUM STAND	76,11	92,10
14065-000-55	KM14065B	KEYBOARD BENCH	50,74	61,40
14065-000-81	KM14065S	KEYBOARD BENCH	50,74	61,40
14066-000-55	KM14066B	KEYBOARD BENCH	62,54	75,67
14075-000-55	KM14075B	KEYBOARD BENCH	89,25	107,99
14076-000-55	KM14076B	KEYBOARD BENCH	91,30	110,48
14085-000-55	KM14085B	KEYBOARD BENCH	159,98	193,58
14086-000-55	KM14086B	KEYBOARD BENCH	159,98	193,58
14100-000-01	KM14100C	BASS STAND	99,45	120,33
14110-000-01	KM14110C	CELLO STAND	99,55	120,45
14300-000-55	KM14300B	SAXOPHONE STAND	20,73	25,08
14315-000-55	KM14315B	Soprano Saxophone Stand	31,67	38,33
14320-000-55	KM14320B	Double saxophone stand	45,57	55,14
14330-000-55	KM14330B	SAXOPHONE STAND »JAZZ«	41,05	49,67
14335-000-55	KM14335B	SAXOPHONE STAND »JAZZ«	46,06	55,73
14340-000-55	KM14340B	SAXOPHONE STAND »SAXXY«	36,04	43,60
14345-000-55	KM14345B	SAXOPHONE STAND »SAXXY«	36,04	43,60
14350-000-55	KM14350B	SAXOPHONE STAND »SAXXY«	41,85	50,64
14360-001-55	KM14360B	SAXOPHONE STAND »MIDGE«	28,28	34,22
14365-000-55	KM14365B	SAXOPHONE STAND »MIDGE«	29,90	36,18
14410-000-55	KM14410B	BARITONE SAXOPHONE STAND	48,47	58,65
14760-000-55	KM14760B	GITAR PERFORMER STAND	189,23	228,97
14761-000-55	KM14761B	GITAR PERFORMER STAND	189,03	228,73
14910-000-01	KM14910C	BASS TROMBONE STAND	93,57	113,22
14920-000-01	KM14920C	TENOR HORN STAND	73,20	88,58
14930-000-01	KM14930C	SOUSAPHONE STAND	118,45	143,33
14940-000-55	KM14940B	TUBA STAND	82,23	99,50
14941-000-55	KM14941B	BARITONE STAND	82,23	99,50
14945-000-55	KM14945B	STAND FOR KINGSIZE TUBA	144,63	175,00
14950-000-01	KM14950C	TUBA PERFORMER STAND	80,39	97,27
14951-000-01	KM14951C	TUBA PERFORMER STAND	82,09	99,33
14952-000-55	KM14952B	TUBA PERFORMER STAND FOR CHILDREN	79,35	96,01
14985-000-55	KM14985B	TROMBONE STAND	25,07	30,33
14990-000-01	KM14990C	TROMBONE STAND	36,44	44,09
15010-000-01	KM15010C	BASSOON STAND	79,51	96,20
15040-000-01	KM15040C	BASSOON STAND	86,58	104,76
15045-000-01	KM15045C	CONTRA BASSOON STAND	103,42	125,14
15140-000-01	KM15140C	FRENCH HORN STAND	56,24	68,05
15210-000-55	KM15210B	TRUMPET STAND	16,05	19,42
15213-000-55	KM15213B	TRUMPET STAND	19,39	23,46
15220-000-01	KM15220C	CLARINET STAND	13,20	15,97
15222-000-55	KM15222B	CLARINET STAND	13,37	16,18
15230-000-01	KM15230C	FLUTE STAND	13,04	15,78
15232-000-55	KM15232B	FLUTE STAND	13,54	16,38
15240-000-55	KM15240B	FLUGELHORN STAND	27,08	32,77
15250-000-01	KM15250C	FLUTE STAND	13,09	15,84
15252-000-55	KM15252B	FLUTE STAND	13,25	16,03
15260-000-01	KM15260C	FLUTE STAND	13,09	15,84
15262-000-55	KM15262B	FLUTE STAND	13,25	16,03
15270-000-55	KM15270B	TROMBONE STAND	60,76	73,52
15290-000-55	KM15290B	SOPRANO SAXOPHONE STAND	22,56	27,30
15520-000-55	KM15520B	VIOLIN STAND	22,62	27,38
15530-000-55	KM15530B	VIOLIN STAND	32,64	39,50
16410-000-01	KM16410C	HARMONICA HOLDER	11,87	14,36
16415-000-55	KM16415B	HARMONICA HOLDER	14,71	17,80
16416-000-55	KM16416B	HARMONICA HOLDER	17,13	20,73
17530-000-54	KM17530BL	GITAR STAND »BIG FOOT«	14,06	17,01
17530-000-55	KM17530BL	GITAR STAND »BIG FOOT«	14,06	17,01

17530-000-59	KM17530R	GUIAR STAND »BIG FOOT«	14,06	17,01
17530-000-60	KM17530GR	GUIAR STAND »BIG FOOT«	14,06	17,01
17530-000-67	KM17530T	GUIAR STAND »BIG FOOT«	14,06	17,01
17530-000-71	KM17530O	GUIAR STAND »BIG FOOT«	14,06	17,01
17540-070-55	KM17540B	GUIAR STAND	25,20	30,49
17541-070-55	KM17541B	GUIAR STAND	25,20	30,49
17550-000-35	KM17550B	GUIAR STAND	20,73	25,08
17580-000-54	KM17580BL	GUIAR STAND »HELI«	14,06	17,01
17580-000-55	KM17580B	GUIAR STAND »HELI«	14,04	16,99
17580-000-59	KM17580R	GUIAR STAND »HELI«	14,06	17,01
17580-000-60	KM17580GR	GUIAR STAND »HELI«	14,06	17,01
17581-000-55	KM17581B	GUIAR STAND »HELI«	15,54	18,80
17590-000-55	KM17590B	GUIAR STAND »WAVE 20«	9,86	11,93
17591-000-55	KM17591B	GUIAR STAND »WAVE 10«	9,86	11,93
17670-000-55	KM17670B	GUIAR STAND »MEMPHIS PRO«	31,84	38,52
17680-000-55	KM17680B	GUIAR STAND »MEMPHIS 10«	21,56	26,09
17685-000-55	KM17685B	GUIAR STAND »MEMPHIS 20«	21,39	25,88
17690-000-55	KM17690B	GUIAR STAND »MEMPHIS 30«	21,06	25,48
18810-000-55	KM18810B	TABLE-STYLE KEYBOARD STAND	117,97	142,74
18840-000-30	KM18840C	KEYBOARD STAND »BABY-SPIDER PRO«	193,92	234,64
18840-000-35	KM18840B	KEYBOARD STAND »BABY-SPIDER PRO«	193,92	234,64
18850-000-30	KM18850C	KEYBOARD STAND »SPIDER«	193,92	234,64
18850-000-35	KM18850B	KEYBOARD STAND »SPIDER«	193,92	234,64
18860-000-30	KM18860C	KEYBOARD STAND »SPIDER PRO«	231,09	279,62
18860-000-35	KM18860B	KEYBOARD STAND »SPIDER PRO«	231,09	279,62
18880-000-30	KM18880C	TABLE-STYLE KEYBOARD STAND	117,48	142,15
18880-000-55	KM18880B	TABLE-STYLE KEYBOARD STAND	106,30	128,62
18910-000-55	KM18910B	KEYBOARD STAND	39,44	47,72
18913-000-55	KM18913B	DIGITAL PIANO STAND	39,43	47,71
18940-070-55	KM18940B	KEYBOARD STAND	50,48	61,08
18940-070-78	KM18940S	KEYBOARD STAND	59,95	72,54
18950-000-55	KM18950B	TABLE-STYLE KEYBOARD STAND	142,40	172,30
18950-000-78	KM18950S	TABLE-STYLE KEYBOARD STAND	146,89	177,74
18953-000-55	KM18953B	TABLE-STYLE DIGITAL PIANO STAND	139,14	168,36
18962-071-55	KM18962B	KEYBOARD STAND	26,30	31,82
18962-071-81	KM18962S	KEYBOARD STAND	29,90	36,17
18963-071-55	KM18963B	KEYBOARD STAND	37,01	44,78
18963-071-81	KM18963S	KEYBOARD STAND	41,05	49,67
18969-071-55	KM18969B	KEYBOARD STAND FOR KIDS	28,60	34,61
18980-000-55	KM18980B	ALUMINUM KEYBOARD STAND	133,54	161,58
18990-070-55	KM18990B	KEYBOARD STAND »RICK«	66,69	80,69
18990-070-78	KM18990S	KEYBOARD STAND »RICK«	67,87	82,13
18993-000-55	KM18993B	KEYBOARD STAND »RICK 20«	66,74	80,76
18993-000-78	KM18993S	KEYBOARD STAND »RICK 20«	67,87	82,13
28070-070-55	KM28070B	HACKBRETT STAND	136,07	164,64
28075-000-55	KM28750B	MIXER STAND	135,39	163,82
42040-000-55	KM42040B	MIXER STAND	105,04	127,10

Type Goosenecks

			excl VAT	incl VAT
22300-300-01	KM22300C	GOOSENECK	21,06	25,48
22300-300-55	KM22300B	GOOSENECK	22,06	26,69
22400-300-01	KM22400C	GOOSENECK	16,71	20,22
22400-300-55	KM22400B	GOOSENECK	16,71	20,22
22500-300-01	KM22500C	GOOSENECK	13,57	16,42
22500-300-55	KM22500B	GOOSENECK	13,54	16,38
22600-300-01	KM22600C	GOOSENECK	10,70	12,95
22600-300-55	KM22600B	GOOSENECK	10,53	12,74
22700-300-01	KM22700C	GOOSENECK	48,47	58,65
22700-300-55	KM22700B	GOOSENECK	54,82	66,33
22800-300-01	KM228001C	GOOSENECK	57,83	69,97
22800-300-55	KM22800B	GOOSENECK	60,84	73,62
23010-300-01	KM23010C	GOOSENECK	36,44	44,09
23010-300-55	KM23010B	GOOSENECK	35,60	43,08
23020-000-01	KM23020C	GOOSENECK	37,44	45,30
23020-000-55	KM23020B	GOOSENECK	36,27	43,89
23030-300-01	KM23030C	GOOSENECK	40,78	49,34
23030-300-55	KM23030B	GOOSENECK	39,95	48,34
23040-000-01	KM23040C	GOOSENECK	39,45	47,73
23040-000-55	KM23040B	GOOSENECK	38,11	46,11

Type Speaker stands

			excl VAT	incl VAT
21300-000-55	KM21300B	SPEAKER STAND	185,84	224,87
21302-000-55	KM21302B	SPEAKER STAND	151,60	183,44
21420-000-55	KM21420B	SPEAKER/MONITOR STAND	41,45	50,15
21435-009-55	KM21435B	SPEAKER STAND - improved model	55,55	67,22
21436-009-55	KM21436B	SPEAKER STAND - improved model	68,03	82,32
21437-000-55	KM21437B	SPEAKER STAND	75,22	91,02
21438-000-55	KM21438B	SPEAKER STAND	81,90	99,10
21440-000-55	KM21440B	SPEAKER STAND »RING LOCK«	145,72	176,32
21450-000-30	KM21450C	SPEAKER STAND	53,82	65,12
21450-000-55	KM21450B	SPEAKER STAND	46,86	56,70

21455-000-55		KM21455B	SPEAKER STAND	106,97	129,43
21460-009-55	New	KM21460B	SPEAKER STAND - improved model	99,38	120,25
21460-009-57	New	KM21460W	SPEAKER STAND - improved model	117,16	141,76
21460-009-81	New	KM21460S	SPEAKER STAND - improved model	117,16	141,76
21494-000-55		KM21494B	SPEAKER STAND	126,03	152,50
24610-000-55	↓	KM24610B	LIGHT/SPEAKER STAND	250,48	303,08
26750-000-55		KM26750B	SPEAKER STAND	84,41	102,14
37157.		KM37157B	Lightweight aluminium speaker stand for loads upto 35 Kgr	42,98	52,00

Type Speaker brackets

				excl VAT	incl VAT
24100-000-55		KM24100B	SPEAKER WALL MOUNT	41,79	50,57
24102-000-55		KM24102B	CORNER SPEAKER WALL MOUNT	46,97	56,83
24110-000-55		KM24110B	SPEAKER WALL MOUNT	64,96	78,61
24120-000-55	New	KM24120B	SPEAKER WALL MOUNT	127,66	154,47
24150-000-55		KM24150B	SPEAKER WALL MOUNT	66,69	80,69
24180-000-55		KM24180B	SPEAKER WALL MOUNT	28,58	34,58
24180-000-57		KM24180W	SPEAKER WALL MOUNT	28,58	34,58
24185-000-55		KM24185B	SPEAKER WALL MOUNT	24,74	29,94
24195-000-55		KM24195B	SPEAKER WALL MOUNT	32,59	39,43
24465-000-55		KM24465B	SPEAKER WALL MOUNT	34,93	42,27
24465-000-57		KM24465W	SPEAKER WALL MOUNT	34,93	42,27
24470-000-55		KM24470B	SPEAKER WALL MOUNT	71,87	86,96
24471-000-55		KM24471B	SPEAKER WALL MOUNT	61,18	74,03
24480-000-55		KM24480B	SPEAKER WALL MOUNT	76,72	92,83
24481-000-55		KM24481B	SPEAKER WALL MOUNT	65,86	79,69
24485-000-55		KM24485B	SPEAKER CEILING MOUNT	73,88	89,39
24485-000-57		KM24485W	SPEAKER CEILING MOUNT	73,88	89,39

Type 19 Inch Racks

				excl VAT	incl VAT
28200-000-55		KM28200B	RACK WAGON	216,38	261,82
28201-000-55		KM28201B	SIDE COVER FOR 28200	85,65	103,63
28210-070-55		KM28210B	PANEL	6,35	7,68
28220-070-55		KM28220B	PANEL	6,85	8,29
28230-070-55		KM28230B	PANEL	10,70	12,95
28240-070-55		KM28240B	PANEL	11,70	14,16
28410-000-55		KM28410B	SINGLE RACK RAIL	6,02	7,28
28451-000-55		KM28451B	VENTILATION PANEL	8,02	9,70
28452-000-55	↑	KM28452B	VENTILATION PANEL	10,83	13,10
28480-000-55		KM28480B	RACKSHELLY	13,54	16,38
28481-000-55		KM28481B300	19" RACK SHELF	23,23	28,11
28481-070-55	↑	KM28481B380	19" RACK SHELF	27,31	33,05
28482-000-55	↑	KM28482B300	19" RACK SHELF	25,05	30,31
28482-070-55		KM28482B380	19" RACK SHELF	29,75	36,00
28483-000-55		KM28483B300	19" RACK SHELF	27,41	33,17
28483-070-55	↑	KM28483B380	19" RACK SHELF	30,70	37,15
28635-000-55		KM28635B	DOUBLE RACK RAIL	16,71	20,22
28664-000-55		KM28664B	19" POWER BOX	114,33	138,34
28665-000-55		KM28665B	19" POWER BOX	86,41	104,56
28668-000-55		KM28668B	19" POWER BOX	106,30	128,62
28670-000-55		KM28670B	19" POWER BOX	65,35	79,07
28675-000-55		KM28675B	19" POWER BOX	69,03	83,53
28676-000-55		KM28676B	19" POWER BOX	149,26	180,60
28680-000-55	↑	KM28680B	SUPPORT BRACKET	7,11	8,60
28681-000-55	↑	KM28681B	SUPPORT BRACKET	9,86	11,93
28687-000-55	↑	KM28687B	SUPPORT BRACKET	10,83	13,10
40900-000-55		KM40900B	RACK DESK STAND	75,72	91,62
42015-000-55		KM42015B	19" RACK	104,13	126,00
42020-000-55		KM42020B	19" RACK WAGON	285,15	345,03
42021-000-55	↑	KM42021B	EXTENDER BRACKETS 19"	63,02	76,25
48240-008-55		KM48240B8	RACK	147,09	177,98
48240-012-55		KM48240B12	RACK	179,52	217,22
48260-016-55		KM48240B16	RACK	281,64	340,78
48260-021-55		KM48260B	RACK	304,87	368,89
48314-000-55		KM48314B	MULTI-BAY RACK	302,70	366,27
48321-000-55		KM48321B	MULTI-BAY RACK	317,24	383,86
48329-000-55		KM48329B	MULTI-BAY RACK	355,35	429,97
48337-000-55		KM48337B	MULTI-BAY RACK	393,13	475,69
48343-000-55		KM48343B	MULTI-BAY RACK	409,51	495,51
48362-014-55		KM48362B	SIDE PANEL	219,96	266,15
48363-021-55		KM14363B	SIDE PANEL	252,56	305,60
48364-029-55		KM48364B	SIDE PANEL	284,98	344,83
48365-037-55		KM48365B	SIDE PANEL	317,24	383,86
48366-043-55		KM48366B	SIDE PANEL	398,64	482,35
48372-014-55		KM48372B	REAR PANEL	119,01	144,00
48373-021-55		KM48373B	REAR PANEL	137,06	165,84
48374-029-55		KM47374B	REAR PANEL	151,60	183,44
48375-037-55		KM47375B	REAR PANEL	178,68	216,20
48376-043-55		KM48376B	REAR PANEL	187,54	226,92
48382-014-55		KM48382B	FRONT DOOR	171,32	207,30
48383-021-55		KM48383B	FRONT DOOR	193,05	233,59
48384-029-55		KM48384B	FRONT DOOR	204,59	247,55

48385-037-55	KM48385B	FRONT DOOR	243,36	294,47
48386-043-55	KM48386B	FRONT DOOR	281,31	340,39
48392-014-00	KM48392	PLEXI FRONT DOOR	310,06	375,17
48393-021-00	KM48393	PLEXI FRONT DOOR	360,70	436,45
48394-029-00	KM48394	PLEXI FRONT DOOR	443,77	536,96
48395-037-00	KM48395	PLEXI FRONT DOOR	553,59	669,84
48396-043-00	KM48396	PLEXI FRONT DOOR	577,16	698,36
48455-000-00	KM48455	CASTERS	35,77	43,28
49010-000-55	KM49010B	CABLE HANGER	27,91	33,77
49035-000-55	KM49035B	UNIVERSAL RACK SHELF	22,56	27,30
49070-000-55	KM49070B	SLIDING SHELF	128,37	155,33
49103-000-55	KM49103B	RACKMOUNT LOCKBOX	78,06	94,45
49104-000-55	KM49104B	RACKMOUNT LOCKBOX	85,91	103,95
49122-072-55	KM49122B	RACKMOUNT STORAGE	115,50	139,76
49123-073-55	KM49123B	RACKMOUNT STORAGE	123,69	149,66
49124-074-55	KM49124B	RACKMOUNT STORAGE	134,55	162,81
49155-000-55	KM49155B	CD HOLDER	37,44	45,30
49290-000-55	KM49290B	19" RACK MOUNTING LAMP	82,24	99,51
49302-000-55	KM49302B	HEADPHONE HOLDER	11,03	13,35
49332-000-00	KM49332	PLEXIGLASS SECURITY COVER	51,31	62,09
49334-000-00	KM49334	PLEXIGLASS SECURITY COVER	56,83	68,76
49411-000-55	KM49411B	PANEL	5,01	6,06
49412-000-55	KM49412B	PANEL	5,52	6,68
49413-000-55	KM49413B	PANEL	6,52	7,89
49414-000-55	KM49414B	PANEL	8,02	9,70
49421-000-55	KM49421B	PANEL	7,19	8,70
49422-000-55	KM49422B	PANEL	9,03	10,93
49423-000-55	KM49423B	PANEL	10,53	12,74
49424-000-55	KM49424B	PANEL	12,03	14,56
49451-000-55	KM49451B	PANEL	13,87	16,78
49471-000-55	KM49471B	VENTILATION PANEL	10,03	12,14
49472-000-55	KM49472B	VENTILATION PANEL	11,87	14,36
49473-000-55	KM49473B	VENTILATION PANEL	14,88	18,00
49481-000-55	KM49481B	VENTILATION PANEL	14,04	16,99
49482-000-55	KM49482B	VENTILATION PANEL	16,21	19,61
49483-000-55	KM49483B	VENTILATION PANEL	19,89	24,07

Type **Accessoires**

excl
VAT

incl
VAT

10012-000-00	KM10012	CARRYING CASE	5,85	7,08
10111-000-00	KM10111	CARRYING CASE	4,85	5,87
10711-000-00	KM10711	CARRYING CASE	11,53	13,95
10811-000-00	KM10811	CARRYING CASE	14,37	17,39
11450-000-00	KM11450	CARRYING CASE	33,59	40,64
11520-000-55	KM11520B	SHEET MUSIC AND DOCUMENT HOLDER	24,24	29,33
11540-000-55	KM11540B	SHEET MUSIC AND DOCUMENT HOLDER	55,43	67,07
11560-000-55	KM11560B	MAGNET	2,75	3,32
11561-000-55	KM11561B	MAGNET	3,07	3,72
11580-000-01	KM11580C	POWER MAGNET	3,88	4,69
12150-000-55	KM12150B	LAPTOP STAND	120,39	145,67
12211-000-01	KM12211C	TRAY	25,37	30,70
12212-000-01	KM12212C	TRAY	26,07	31,54
12218-000-55	KM12218B	TRAY	27,58	33,37
12219-500-01	KM12219C	TRAY	26,02	31,48
12230-000-55	KM12230B	MUSIC STAND LIGHT »STARLIGHT MINI«	28,75	34,79
12231-000-55	KM12231B	POWER UNIT FOR »STARLIGHT MINI«	8,73	10,56
12235-000-55	KM12235B	MUSIC STAND LIGHT »STARLIGHT«	46,97	56,83
12236-000-00	KM12236	CARRYING CASE	9,86	11,93
12250-000-55	KM12250B	MUSIC STAND LIGHT	28,07	33,96
12253-000-55	KM12253B	MUSIC STAND LIGHT	48,97	59,25
12260-000-55	KM12260B	DOUBLE MUSIC STAND LIGHT	48,47	58,65
12275-000-55	KM12275B	DOUBLE MUSIC STAND LIGHT	69,86	84,53
12280-000-00	KM12280	Power Unit for 12285	12,12	14,67
12281-000-00	KM12281	CARRYING CASE	10,18	12,32
12285-000-55	KM12285B	MUSIC STAND LIGHT	35,77	43,28
12286-000-55	KM12286B	MUSIC STAND LIGHT PACKAGE	47,80	57,84
12290-000-00	KM12290	REPLACEMENT BULB	4,35	5,26
12380-000-81	KM12380S	LECTERN »OVATION«	720,09	871,31
12381-000-81	KM12381S	READING LIGHT »NEAT FLEX«	133,48	161,51
12382-000-00	KM12382	REPLACEMENT BULB FOR READING LIGHT	11,70	14,16
12383-000-81	KM12383S	PROMOTIONAL BOARD (excl. Logo)	26,18	31,68
12386-000-81	KM12386S	LECTERN »OVATION PRO«	900,04	1089,05
12387-000-00	KM12387	PROTECTIVE COVER FOR LECTERN	117,48	142,15
12388-000-00	KM12388	TRANSPORTATION CASE (HARD CASE) FOR LECTERN	804,77	973,77
13100-000-01	KM13100C	MUSIC HOLDER	15,19	18,38
13100-000-55	KM13100B	MUSIC HOLDER	14,87	17,99
14000-000-02	KM14000C	DRUMMER'S THRONE »GOMEZZ«	186,69	225,89
14001-000-00	KM14001	HOLDER WITH TUNING KEY	11,20	13,55
14002-000-00	KM14002	SPIKE SET	8,86	10,72
14007-000-02	KM14007C	DRUMMER'S THRONE	180,67	218,61
14015-000-55	KM14015B	DRUMMER'S THRONE	97,44	117,90
14016-000-55	KM14016B	DRUMMER'S THRONE	112,32	135,91
14025-000-01	KM14025C	DRUMMER'S THRONE	64,64	78,21
14042-000-55	KM14042B	BACKREST	58,83	71,18

14043-000-55	KM14043B	BACKREST	67,71	81,93
14051-000-55	KM14051B	FOOTREST	30,42	36,81
14052-000-55	KM14052B	STOOL	149,59	181,00
14053-000-55	KM14053B	STOOL	160,31	193,97
14055-000-55	KM14055B	DRUMMER'S THRONE »NICK«	136,55	165,23
14056-000-55	KM14056B	DRUMMER'S THRONE »NICK«	151,59	183,42
14301-000-55	KM14301B	PEG HOLDER	3,72	4,50
14302-000-00	KM14302	CARRYING CASE	15,54	18,80
14530-000-06	KM14530C	GITAR CAPO	26,18	31,68
14535-000-06	KM14535C	GITAR CAPO	26,18	31,68
14540-000-55	KM14540B	GITAR CAPO	9,21	11,15
14545-000-55	KM14545B	GITAR CAPO	9,21	11,15
14670-000-01	KM14670C	Footrest	11,53	13,95
14670-000-54	KM14670BL	Footrest	11,47	13,88
14670-000-55	KM14670B	Footrest	9,86	11,93
14670-000-59	KM14670R	Footrest	11,47	13,88
14675-000-55	KM14675B	Footrest	13,25	16,03
14942-000-00	KM14942	CARRYING CASE	15,68	18,97
15214-000-55	KM15214B	TRUMPET PEG	8,89	10,75
15224-000-55	KM15224B	CLARINET PEG	8,08	9,78
15225-000-01	KM15225C	CLARINET HOLDER	13,90	16,82
15235-000-01	KM15235C	FLUTE HOLDER	13,25	16,03
15244-000-55	KM15244B	FLUGELHORN PEG	15,51	18,77
15255-000-01	KM15255C	FLUTE HOLDER	13,25	16,03
15265-000-01	KM15265C	FLUTE HOLDER	13,20	15,97
15281-005-55	KM15281B	PEG ADAPTER	4,36	5,28
15294-000-55	KM15294B	SOPRANO SAXOPHONE PEG	8,73	10,56
15500-000-01	KM15500C	VIOLIN HOLDER	15,35	18,57
15700-000-01	KM15700C	TRUMPET HOLDER	11,31	13,69
15715-000-01	KM15715C	TRUMPET HOLDER	15,54	18,80
15900-000-01	KM15900C	MUTE HOLDER	13,74	16,63
16015-000-01	KM16015C	ASHTRAY	16,97	20,53
16020-000-55	KM16020B	DRINK HOLDER	9,03	10,93
16022-000-55	KM16022B	UNIVERSAL DRINK HOLDER	14,54	17,59
16030-000-55	KM16030B	CD HOLDER	12,12	14,67
16035-000-55	KM16035B	MOBILE PHONE HOLDER	10,83	13,10
16040-000-01	KM16040C	CIGARETTE HOLDER	16,97	20,53
16050-000-01	KM16050C	SPECTACLE HOLDER	17,78	21,51
16060-000-55	KM16060B	SHEET MUSIC CLIP	2,84	3,44
16065-000-55	KM16065B	SHEET MUSIC CLIP »LYRE«	1,70	2,05
16092-000-55	KM16092B	PENCIL HOLDER	0,73	0,88
16094-000-55	KM16094B	PENCIL HOLDER	0,67	0,81
16096-000-55	KM16096B	PENCIL HOLDER	0,73	0,88
16098-000-55	KM16098B	PENCIL HOLDER	2,59	3,13
16100-000-55	New KM16100B	GITAR WALL MOUNT	8,19	9,91
16200-000-55	New KM16200B	GITAR WALL MOUNT	9,69	11,72
16235-000-55	New KM16235B	GITAR WALL MOUNT	14,22	17,21
16240-000-55	KM16240B	GITAR WALL MOUNT	12,60	15,25
16245-000-55	New KM16245B	GITAR WALL MOUNT	22,95	27,77
16255-000-55	New KM16255B	GITAR WALL MOUNT	20,56	24,88
16280-000-55	KM16280B	GITAR WALL MOUNT	8,19	9,91
16295-000-55	KM16295B	Wall Mount for Electric Guitar	48,64	58,86
16296-000-55	KM16295B	Wall Mount for Acoustic Guitar	48,64	58,86
16420-000-01	KM16420C	TRIANGLE HOLDER	10,67	12,91
16600-000-01	KM16600C	PIANO TUNING LEVER	16,48	19,94
16610-000-01	KM16610C	PIANO TUNING LEVER	18,42	22,29
16700-000-01	KM16700C	PIANO TUNING LEVER SET	62,34	75,43
16800-000-01	KM16800C	TUNING FORK	3,01	3,64
16810-000-01	KM16810C	TUNING FORK	4,01	4,85
16820-000-01	KM16820C	TUNING FORK	6,18	7,48
17552-000-55	KM17552B	COTTON COVER	3,39	4,11
17700-005-55	KM17700B	FOLDABLE BASE	7,76	9,39
17710-005-55	KM17710B	FOLDABLE BASE	10,34	12,51
17731-005-55	KM17731B	ENGLISH HORN PEG	9,53	11,54
17738-005-55	New KM17738B	OBOE PEG	10,02	12,12
17741-005-55	KM17741B	CLARINET PEG	9,21	11,15
17782-005-55	KM17782B	FLUTE PEG	6,79	8,21
17786-005-55	KM17786B	FLUTE PEG	6,79	8,21
17788-005-55	KM17788B	FLUTE PEG	6,79	8,21
18020-000-55	New KM18020B	OBOE STAND	17,29	20,92
18846-000-00	KM18846	CARRYING CASE	22,30	26,98
18851-000-00	KM18851	CARRYING CASE	27,58	33,37
18852-000-55	KM18852B	ADAPTER FOR »SPIDER«	23,27	28,16
18855-000-30	KM18855C	SUPPORT ARM SET	49,13	59,44
18855-000-35	KM18855B	SUPPORT ARM SET	49,13	59,44
18865-000-30	KM18865C	SUPPORT ARM SET A	54,62	66,09
18865-000-35	KM18865B	SUPPORT ARM SET A	54,62	66,09
18866-000-30	KM18866C	SUPPORT ARM SET B	54,62	66,09
18866-000-35	KM18866B	SUPPORT ARM SET B	54,62	66,09
18881-000-30	KM18881C	STACKER A	50,26	60,81
18881-000-55	KM18881B	STACKER A	46,46	56,22
18882-000-30	KM18882C	STACKER B	57,53	69,61
18882-000-55	KM18882B	STACKER B	53,15	64,31
18941-000-55	KM18941B	STACKER	50,31	60,88
18941-000-78	KM18941S	STACKER	54,30	65,70

18952-000-55	KM18952B	STACKER	50,48	61,08
18952-000-78	KM18952S	STACKER	56,56	68,44
18954-000-55	KM18954B	ADAPTER	13,25	16,03
18957-000-55	KM18957B	HEADPHONE HOLDER	10,83	13,10
18958-000-55	KM18958B	MUSIC HOLDER	39,27	47,52
18982-000-55	LM18982B	STACKER	50,48	61,08
19580-000-55	KM19580B	MOUNTING ADAPTER	19,05	23,05
19654-000-55	KM19654B	FLANGE ADAPTER	3,18	3,85
19656-000-55	KM19656B	FLANGE ADAPTER	8,86	10,72
19665-000-55	KM19665B	FLANGE ADAPTER	16,00	19,36
19670-000-55	KM19670B	SPEAKER TILT CONNECTOR	31,26	37,82
19672-000-55	KM19672B	SPEAKER TILT CONNECTOR	27,91	33,77
19674-000-55	KM19674B	SPEAKER TILT CONNECTOR »RING LOCK«	48,31	58,46
19680-000-55	KM19680B	UNIVERSAL ADAPTER	26,66	32,26
19685-300-55	KM19685B	ADAPTER FOR LCD/TFT SCREENS	20,06	24,27
21105-000-55	KM21105B	COUNTER WEIGHT	15,38	18,61
21310-000-55	KM21310B	SAFETY RING	18,05	21,84
21311-000-00	KM21311	CARRYING CASE	25,54	30,90
21326-000-55	KM21326B	ADAPTER SLEEVE	1,50	1,82
21330-900-55	KM21330B	EXTENSION ROD	29,08	35,19
21333-000-55	KM21333B	DISTANCE ROD	14,88	18,00
21334-000-55	KM21334B	DISTANCE ROD	20,06	24,27
21336-000-55	KM21336B	DISTANCE ROD	46,30	56,02
21337-000-55	KM21337B	DISTANCE ROD	45,97	55,62
21338-000-55	KM21338B	DISTANCE ROD WITH HAND CRANK	121,35	146,83
21339-000-55	KM21339B	DISTANCE ROD WITH HAND CRANK	139,57	168,88
21347-000-55	KM21347B	DISTANCE ROD	41,79	50,57
21348-000-55	KM21348B	DISTANCE ROD	35,10	42,47
21360-000-55	KM21360B	DISTANCE ROD »RING LOCK«	46,80	56,63
21364-000-55	KM21364B	DISTANCE ROD »RING LOCK«	43,46	52,59
21366-000-55	KM21366B	DISTANCE ROD »RING LOCK«	71,04	85,96
21367-000-55	KM21367B	DISTANCE ROD »RING LOCK«	57,67	69,78
21390-000-55	KM21390B	CROSSBAR	20,89	25,28
21393-070-55	KM21393B	CROSSBAR	43,12	52,18
21394-000-55	KM21394B	SCREW SET	16,05	19,42
21402-000-00	KM21402	WARNING STRIP	9,86	11,93
21403-003-55	KM21403B	Cable Holder	2,59	3,13
21421-000-00	KM21421	CARRYING CASE	14,54	17,59
21422-000-00	KM21422	CARRYING CASE	14,54	17,59
21441-000-55	KM21441B	ADAPTER SLEEVE »RING LOCK«	40,95	49,55
21500-000-01	KM21500C	THREAD ADAPTER	1,50	1,82
21600-000-01	KM21600C	THREAD ADAPTER	2,34	2,83
21700-000-01	KM21700C	THREAD ADAPTER	1,00	1,21
21800-000-01	KM21800C	THREAD ADAPTER	2,01	2,43
21900-000-01	KM21900C	THREAD ADAPTER	2,17	2,63
23550-300-55	KM23550B	MICROPHONE BAR	10,03	12,14
23600-300-55	KM23600B	MICROPHONE BAR	19,39	23,46
23750-000-55	KM23750B	MICROPHONE »FISHING POLE«	58,17	70,39
23760-000-55	KM23760B	MICROPHONE »FISHING POLE«	93,60	113,26
23770-000-55	KM23770B	MICROPHONE »FISHING POLE«	103,63	125,39
23800-300-55	KM23800B	MICROPHONE HOLDER	13,37	16,18
23850-300-55	KM23850B	MICROPHONE DESK ARM	84,43	102,16
23860-300-55	KM23860B	MICROPHONE DESK ARM	151,90	183,80
23956-000-55	KM23956B	POPKILLER	21,82	26,40
23966-000-55	KM23966B	POPKILLER	29,08	35,19
24010-300-55	KM24010B	MICROPHONE ARM	28,08	33,98
24030-300-01	KM24030C	MICROPHONE HOLDER FOR DRUMS	13,71	16,59
24030-300-55	KM24030B	MICROPHONE HOLDER FOR DRUMS	13,54	16,38
24035-300-01	KM24035C	MICROPHONE HOLDER FOR DRUMS	14,54	17,60
24035-300-55	KM24035B	MICROPHONE HOLDER FOR DRUMS	14,54	17,59
24050-300-55	KM24050B	MICROPHONE HOLDER	27,24	32,96
24105-000-55	KM24105B	MOUNTING FORK	43,96	53,19
24106-000-55	KM24106B	SPEAKER MOUNTING FORK	71,10	86,03
24116-000-55	KM24116B	CONNECTOR PLATE	8,19	9,91
24281-000-55	KM24281B	SCREW-ON ADAPTER	24,74	29,94
24428-000-55	KM24428B	WALL MOUNT FOR LCD/TFT SCREENS	177,76	215,09
24473-000-55	KM24473B	WALL MOUNT FOR LCD/TFT SCREENS	68,03	82,32
24488-000-55	KM24488B	CEILING MOUNT FOR LCD/TFT SCREENS	68,03	82,32
24516-000-00	KM24516	TV PIN	3,18	3,85
24518-000-01	KM24518C	TV PIN	18,39	22,25
24519-000-01	KM24519C	TV PIN	7,02	8,49
24521-000-55	KM24521B10	REDUCER FLANGE - M10	16,55	20,03
24521-300-55	KM24521B3/8	REDUCER FLANGE - 3/8"	18,05	21,84
24528-000-55	KM24528B	REDUCER FLANGE	17,22	20,84
24611-000-00	KM24611	CARRYING CASE	30,54	36,96
24620-000-30	KM24620C	LIGHTING STAND	90,17	109,11
24620-000-35	KM24620B	LIGHTING STAND	90,17	109,11
24621-000-55	KM24621B	SCREW FITTING SET	10,50	12,71
24622-000-30	KM24622C	CROSSBAR	23,27	28,16
24622-000-35	KM24622B	CROSSBAR	23,27	28,16
24625-000-35	KM24625B	LIGHTING STAND	78,56	95,06
24630-000-55	KM24630B	LIGHT STAND	88,59	107,19
24635-000-55	KM24635B	LIGHT STAND	121,18	146,63
24637-000-55	KM24637B	SIDE CROSSBAR	29,92	36,20
24640-000-55	KM24640B	LIGHT STAND	202,00	244,42

26720-000-55	KM26720B	MONITOR STAND	66,02	79,88
26740-000-55	KM26740B	MONITOR STAND	103,63	125,39
26785-000-56	KM26785B	DESIGN MONITOR STAND	202,91	245,52
26790-050-56	KM26790B500	DESIGN MONITOR STAND	168,82	204,27
26790-065-56	KM26790B650	DESIGN MONITOR STAND	179,01	216,60
26790-080-56	KM26790B800	DESIGN MONITOR STAND	185,87	224,90
26792-024-56	KM26792B240	BEARING PLATE	30,09	36,41
26792-032-56	KM26792B320	BEARING PLATE	37,78	45,71
26792-042-56	KM26792B420	BEARING PLATE	53,99	65,33
26794-000-56	KM26794B	EQUIPMENT TRAY	132,05	159,78
26795-000-56	KM26795B	DESIGN MONITOR STAND	213,11	257,86
26796-000-56	KM26796B	TV STAND	299,19	362,02
26797-000-56	KM26797B	TV STAND	332,62	402,47
28101-000-55	KM28101B	MONITOR STAND	89,76	108,61
28130-000-55	KM28130B	AMP STAND	36,94	44,70
44140-000-55	New KM44140B	PRODUCT HOLDER FOR GUITAR	18,75	22,69
66290-000-55	KM66290B	HOLDING FLANGE FOR TV PIN	62,68	75,84
66350-070-55	KM66350B	CONNECTION SLEEVE	30,09	36,41
83845-000-00	KM83845	GUITAR TOOL	25,69	31,09
85035-000-55	KM85035B	MICROPHONE CLIP	2,91	3,52
85040-000-55	KM85040B	THREAD ADAPTER	0,81	0,98
85045-217-55	KM85045B	THREAD ADAPTER	0,81	0,98
85050-000-55	KM85050B	MICROPHONE CLIP	2,57	3,11
85055-000-55	KM85055B	MICROPHONE CLIP	2,71	3,28
85060-000-55	KM85060B	MICROPHONE CLIP	2,85	3,45
85600-000-55	KM85600B	MUSIC STAND LIGHT »MIGHTY BRIGHT«	13,54	16,38
85600-000-63	KM85600S	MUSIC STAND LIGHT »MIGHTY BRIGHT«	13,57	16,43
85601-000-00	KM85601	LIGHT BULB	4,35	5,26
85620-000-55	KM85620B	MUSIC STAND LIGHT »MIGHTY BRIGHT - XTRA FLEX«	13,57	16,43
85620-000-63	KM85620S	MUSIC STAND LIGHT »MIGHTY BRIGHT - XTRA FLEX«	13,57	16,43
85630-000-63	KM85630S	MUSIC STAND LIGHT »MIGHTY BRIGHT - TRIPLE LED«	18,89	22,86
85640-000-55	KM85640B	MUSIC STAND LIGHT »MIGHTY BRIGHT - DOUBLE FLEX«	19,89	24,07
85650-000-55	KM85650B	MUSIC STAND LIGHT »MIGHTY BRIGHT - DUET 2«	24,24	29,33
85890-000-55	KM85890B	LEVELLING ADAPTER	2,91	3,52